

TIMER-PUMP SETTING GUIDE

ON / OFF Switch:

- Set switch to O if using D-Cell Batteries .
- Set switch to I if using rechargeable battery packs.

Using / Changing: D-Cell Batteries / Battery Packs

- **D- Cell:** Unscrew wing nuts on front face plate.
- Carefully remove black battery case from inside cabinet. Be careful of existing wiring.
- Disconnect black battery case from from "Quick-Connect" for easier handling.
- Stand battery case upright and slide down both sides to open case.
- Reconnect black battery case to "Quick-Connect".
- After installing / replacing batteries. Insert case back in cabinet and replace wing nuts.
- **Battery Packs:** Charge battery packs for 24 hours previous to use.
- Connect battery cable to female adapter.
- Store battery upright behind black case in cabinet. Replace monthly.

Setting The Timer:

- A. Push the (P) button then push the (D+) button, which is for **what day or days you would like it to run**. Push the (H+) button to set the **hour you want it to turn on**, then push the (M+) button **for the minutes**. You now have the start time set.
- B. **To end the run time**, push the (P) button again and repeat instructions from **"A"** for the (H+) button and (M+) button.
- C. **NOTE: After the 1st day program is set. All the remaining days of the week will automatically be set to the same timing. No need to continue to program days if you want all the run times the same on each day over the course of the week.**

To Set Clock, which is on military time. Hold down the (clock icon) and at the **same time** press the hour button (H+) to set the **hours**. Repeat process to set the **minutes** using the M+ button. To now set the **day**, hold the (clock icon) down with the (D+) button.

- **NOTE:** Make sure that you have all the programming to this point set to **"Auto"**. Use the **"MANUAL"** button to set.
- **NOTE:** Timer will retain settings when batteries are changed or replaced as long as the digital timer is still active.
- To **"Reset" timer:** Push the **"C"** button to start programming over again. Use a pen or paperclip to press.

TIMER-PUMP SETTING GUIDE

PUMP DOSAGE RATE:

- The Pump will deliver approximately 1 ounce (30 milliliters) per minute.

Pump Setting for Monthly, 1-Gallon Delivery:

- **30-32 Days = 4oz. injected per day.**
- **For 4oz. injection: Set timer to run for 4 minutes once per day. OR 2 minutes twice per day. 7 – DAYS PER WEEK.**
- **26-28 Days = 5oz. injected per day.**
- **For 5oz. injection: Set timer to run for 3 minutes then 2 minutes per day. 7 – DAYS PER WEEK.**

PRIMING THE PUMP:

After installing or replacing a new gallon of product, you can prime the pump so that the solution flows from the gallon jug all the way to the drain. Press the **MANUAL** button once to **ON**, to start the prime. When finished priming, push the button 3 more times. Go to **AUTO, OFF** and **making sure you finish on AUTO.**

PUMP and TUBING:

The pick-up side of the pump head is the top. The discharge side is the bottom. Pick up tubing should be attached to the top side of the pump on one end and the other end inserted into the gallon jug, reaching the bottom. You can remove the lid totally from the jug or drill a hole in the jug lid and insert the tubing through it. The discharge tubing should be attached to the bottom side of the pump on one end and the other end fitted through the hole on the left side of the cabinet and then down to the drain.